


C. Control

- When the light is connected to the transformer directly, the on/off switch controls the colour changes (Associating a light with a transformer and an on/off switch is recommended; If you want all the lights to change colour at the same time, install a master switch, Figure 1).
- If applicable, when the light is connected to the transformer and the transformer to the optional control box, the control panel on the control box and its remote control controls the colour changes (See the Control Box Manual for details).

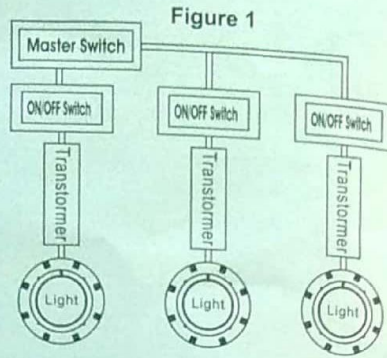

INSTALLATION NOTES

- You should follow the procedures closely when installing the light.
- It is recommended to install a light every 20m², the approximate exposure area of each unit.
- The lights should be installed in the direction that they will not shine directly into the house.
- For training or competition pools, the lights must be installed on the sides in order to prevent swimmers from seeing any glare.
- Nothing should be placed on the poolside directly above the lights for ease of future maintenance.
- If the wires are connected inside the lights, you must seal the connections with leak-proof tapes or products with the same function.
- The cables connecting the lights and the transformers must be at least 6mm² and the distance between them must not exceed 30m (Figure 2); otherwise the lights will not function properly.
- Terminal blocks must meet the IEC60988-2-1 standard having the rated connecting capacity of 4,0mm² use of screw-type terminal at least 25A rated current, mounted on junction boxes inside. See Figure 2-1

Figure 2


 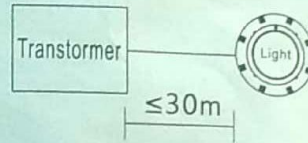


Figure 2-1



INSATALLATION OF THE UNDERWATER LIGHT

A. Preparing to Install

- The circuit system must comply with local laws and regulations and must be carried out by suitably qualified installers.
- Make sure the voltage is 12V and the terminal box is at least 120cm from the poolside (Figure 3).
- Upon installation, top of the light must be at least 45cm from water surface (Figure 3).

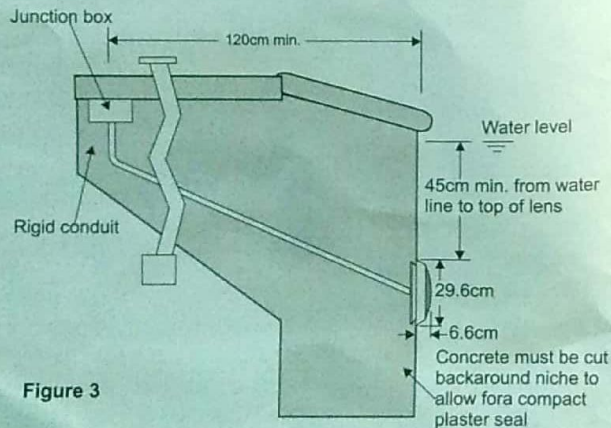


Figure 3

B. Pool Installation

- Embed the Wall Mount into the concrete wall, making sure that it is parallel to the side of the pool. (Figure 4).
- Place the Mounting Plate on the concrete wall and tighten it with 4 screws. The Conduit must be next to the Mounting Plate (Figure 5).
- Note that the light must only be installed on a flat or concave surface.
- Wrap extra cables behind the light to make sure it could be taken to the pool surface for future maintenance (Figure 6).
- Hang the light onto the Mounting Plate and tighten the screws (Figure 7).
- The wire connections inside the terminal box must be sealed by leak-proof tapes to prevent water from leaking into the terminal box through the cables.

Figure 4

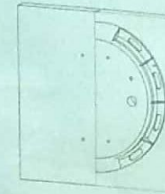


Figure 5

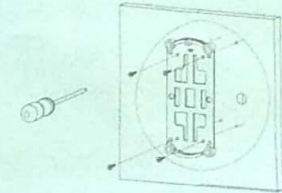


Figure 6


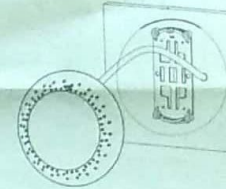


Figure 7

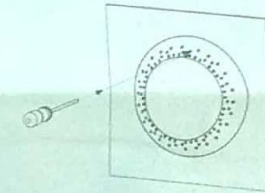

C. Fiberglass Pools / Vinyl Pools Installation

- Refer to section "Preparing to Install".
- Make 2 holes on the pool wall (Figure 8).
- Place the o-rings between the Mounting Plate and the pool wall and tighten it with the Nut on the other side of the pool wall (Figure 9).
- Put the cable sequentially through the sealing Nut, the sealing O-ring and the cable hole on the mounting plate; then tighten the Nut (Figure 10).
- Wrap extra cables behind the light to make sure it could be taken to the pool surface for future maintenance. Then, hang the light onto the Mounting Plate and tighten the screws (Figure 11).

Figure 8

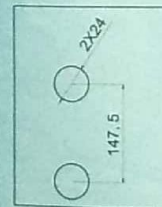


Figure 9

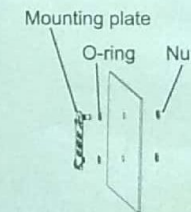


Figure 10

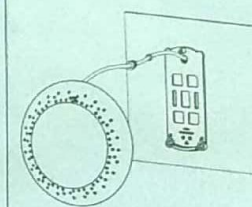


Figure 11

